


Third Eye

Bar End Mirror Installation Guide

Presented By:
Flying Jester Designs

Words & Pictures By:
vdubvr6

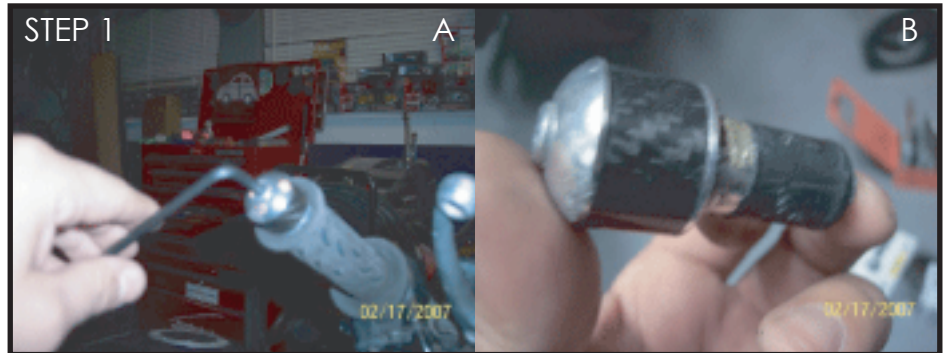


STEP 1: First step is to get your old bar ends off.

Be careful as to not unscrew them too much or the nut will fall off and then you'll have to go fishing inside your handlebars.

I would do one side at a time so you don't get parts confused or anything.



STEP 2: Next, take apart you bar end and keep track of what you have.

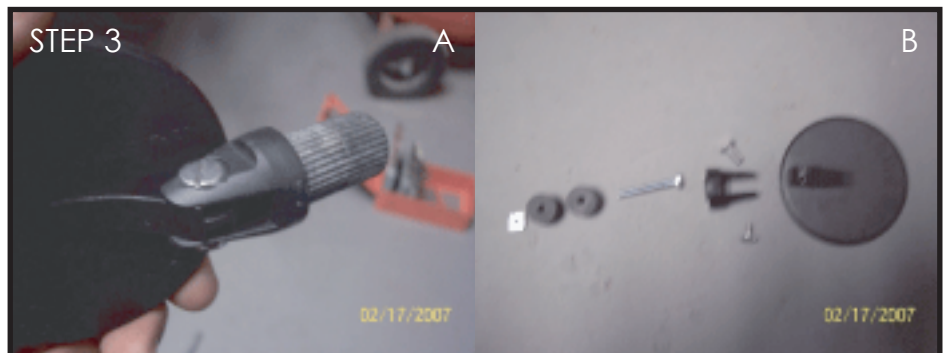

STEP 3: Next, open your third-eye mirror if you havn't already.

Take the mirror apart and get rid of the square nut, long bolt, and 2 rubber pieces. Just set them off to the side, you wont use them, but might wanna keep them just incase.



STEP 4: OK, now we are going to put the bracket end of the mirror that will go into your handlebar together.

I reused my old bar end, bolt, nut, and rubber bushing. I did not use the very end piece of my old bar end as i didn't like the way it looked with the mirror bracket on the end, plus they had a little rash!

This is the order of the "new" pieces that will go together.



STEP 5: I had to make a little modification to the mirror bracket in order for the bolt to fit. First, figure out what size your bar end bolt diameter is and then pick a drill bit the same size and drill through the small mirror bracket hole.



STEP 6: Now the bolt fits, but as you can see, the head of the bolt still sits out. The actual mirror will not fit on the bracket.

You have 2 options here: 1) Grind the head down until the mirror will fit on the bracket; or 2) use a bigger drill bit to sink the head into the mirror bracket so the mirror will fit.

I opted for option #2 because amazingly, of all the tools I do own, a bench grinder is not one of them.

CAUTION!!! When you are drilling the second bigger hole to sink the head, make sure you go really slow, or else the drill bit will eat right through the other side, then you're screwed! Just drill really SLOW.



STEP 7: Now the head of the bolt is sunk into the bracket and the mirror will fit just fine now.



STEP 8: Now, put the bolt through the bracket, then the bar end, then the rubber piece, then the nut.



STEP 9: Ok, now put the bar end w/bracket back on to your handle bar and snug it down.

Not too tight cause you're gonna want to adjust your mirrors right?

Now re-install the mirror onto the mirror bracket. VIOLA! Enjoy!

